

PRODUCT SPECIFICATION

ET-SM-TELE-100

Telescopic-Beam Sheet Metal Vacuum Lifter

ET-SM-TELE-100 is a 1,000 kg mains-powered vacuum lifter with a main beam adjustable from 3 to 5 m and a single vacuum pump. It is a horizontal sheet-handling configuration without tilting.



Series reference image.

Drive: Mains supply

Mounting: Crane hook

Materials: Metal sheets

Configuration, complete technical data and selection guidance

Read the specified load and movement with their conditions. This document supports purchasing and project definition; the supplied equipment instructions govern operation and maintenance.

Jenny Zhan | Phone / WhatsApp: +86 135-3727-1735

Technical specifications

Parameter	Specification
Main beam adjustment	3-5 m
Power supply	Mains supply
Vacuum pump	Single pump
Rated load	1000 kg
Handling orientation	Horizontal handling; no tilting

Model configuration and selection

ET-SM-TELE-100 is a 1,000 kg mains-powered vacuum lifter with a main beam adjustable from 3 to 5 m and a single vacuum pump. It is a horizontal sheet-handling configuration without tilting.

Beam length helps position the pad frame for the sheet; it is not a maximum sheet-size or crane-outreach rating. Compare ET-SM-SIDE-1000 when side-handle access is the main requirement, and ET-SM-FLIP-1000 when the process requires an electrohydraulic tilting arrangement. Do not combine the features of these separate models.

Compare model configurations

Selection point	ET-SM-SIDE-1000	ET-SM-TELE-100	ET-SM-FLIP-1000
Rated load	1000 kg	1000 kg	1000 kg
Power supply	Mains supply	Mains supply	-
Control handle	Side-mounted arrangement	-	-
Main beam adjustment	-	3-5 m	-
Vacuum pump	-	Single pump	-
Handling orientation	-	Horizontal handling; no tilting	-
Pad diameter	-	-	250 mm
Number of pads	-	-	10 pcs

A dash means no value is specified for that comparison field; it does not mean zero or an included feature. Read each model's complete technical data with its operating conditions.

Equipment and intended application

A distributed pad frame grips the sheet using vacuum and transfers its weight to the lifting point. The supporting crane lifts and transports the assembly. Horizontal, tilting and telescopic versions serve different handling sequences: the movement explicitly listed for this model defines its scope.

Workpiece suitability and limits

Topic	Details
Sheet surface	Assess the actual surface, including protective film, oil, rust, scale and perforations. Every active pad needs a sealing area; a clean flat test plate does not establish capacity on a contaminated production sheet.
Sheet dimensions and stiffness	Match pad spread and beam length to sheet length, width, thickness and sag. A sheet may be below the mass limit yet too flexible for the proposed support positions.
Single-sheet handling	Confirm that the intended sheet is free from the stack. Vacuum grip on the top sheet does not establish that only one sheet has separated; the lifting system must not be overloaded by adhered sheets.

Configuration and supply boundaries

Topic	Details
Frame layout	The table describes beam, pad and dimensional information for the selected configuration. Adjustable supports must be locked; an extended beam is not permission to exceed the approved sheet size or load.
Vacuum source	Battery pumps, mains pumps and compressed-air vacuum generators are different versions. A pneumatic vacuum generator needs compressed air; a mains pump requires its specified electrical supply.
Tilting	Where tilting is listed, identify its drive and angular range separately from the vacuum control. A horizontal-only frame must not be used for vertical lifting based on its horizontal rating.
Crane interface	The crane, hook and rigging are a separate part of the installation unless explicitly included. Their permissible load must account for the entire suspended assembly.

Installation and commissioning

- Check the crane capacity, hook height, machine loading opening and travel route using the workpiece plus lifter envelope.
- Place the frame symmetrically about the load centre of gravity. Set and lock crossbeams/pad mounts, and connect all pads required for the stated layout.
- Keep vacuum lines clear of sharp sheet edges and moving machine parts. Provide and verify the specified electrical or compressed-air supply.
- Commission the installed configuration with representative sheets, including the least stiff and most difficult sealing surface in the planned range.

Handling sequence

1. Inspect the frame, suspension point, pad seals, hoses and controls; establish the sheet mass and approved layout.

2. Position the pads on the sheet and apply vacuum. Check the fitted vacuum indication and warning system before taking the weight.
3. Raise in a controlled manner, check that the correct load has separated and guide the sheet clear of obstructions. Use tilt only when the configuration is rated for that orientation.
4. Place the sheet on stable supports or the machine table, transfer its weight fully, and then release the vacuum.

Inspection, maintenance and replacement parts

Topic	Details
Each working period	Inspect pad lips, hoses, beam clamps and the suspension point. Check that the controls return correctly and fitted alarms function.
Contamination control	Keep coolant, metal chips and oil out of the vacuum path. Service the filter using the instructions for its element; investigate recurring contamination at the workpiece.
Wear parts	Identify pads by diameter/profile/material and connection, and hoses by size and service. Keep replacement parts appropriate to the actual machine and sheet finish.
After reconfiguration	Check locked beam positions, connected pad count and vacuum tightness. Reassess permissible loading before lifting with a reduced pad arrangement.

Troubleshooting priorities

Topic	Details
Sheet bends excessively	Set it down and reassess thickness, overhang and support positions. Adding vacuum does not correct an unsuitable mechanical support pattern.
Grip weakens during transfer	Set down safely and check surface condition, leaks, power and pad contact. Do not continue because the load was secure at initial pickup.
Pump runs unusually often	Inspect the seals, hoses and valves for leakage and check the filter. A pressure-switch adjustment should not be used to conceal a leak.

Frequently asked questions

What load should I use when selecting ET-SM-TELE-100?

The stated rated load for ET-SM-TELE-100 is 1000 kg. Apply it only to the specified configuration and operating conditions. Include the workpiece geometry, orientation and any tooling in the application assessment; do not combine separate maximum reach, height and capacity values.

Can the same machine lift different sheet sizes?

An adjustable frame can cover the configurations approved for it. Pad spread, overhang, sheet stiffness and connected pad count must be checked for each size.

Can I turn off unused pads?

Only within an assessed reduced-capacity arrangement. Do not divide or multiply the headline load to invent a new safe working load.

Can it handle an oily sheet?

That is not established by the standard load figure. Oil affects pad friction and can enter the vacuum circuit; evaluate the actual finish and use an approved contact arrangement.

Information for application assessment

- Identify the workpiece material, dimensions, mass, contact surface and centre of gravity. Include the least favourable item in a mixed production range.
- Describe pickup and placement positions, required orientation changes, handling frequency and the site layout.
- Identify the available power or air supply and any host machine, crane, support structure or interface that must be retained.
- State the destination market and required documentation, accessories and packing constraints so the proposed configuration can be assessed as a complete system.

Document scope

This product specification supports equipment selection and project definition. It includes the model data and application guidance presented on the product page. The operating instructions supplied for the actual machine govern commissioning, testing, maintenance procedures and safe use; this specification does not replace them.

[View this model on the Easytech website](#)

Contact Easytech

Dongguan Easytech Automation Mechanical and Electrical Equipment Co., Ltd.

Room 403, No. 212, Zhongxing Road, Dalingshan, Dalingshan Town, Dongguan City

Jenny Zhan | Phone / WhatsApp: +86 135-3727-1735

Email: jennyzhan@auto-easy.com | WeChat: easytech1

<https://www.auto-easy.com/>