


PRODUCT SPECIFICATION

WSR-600M

Multifunction Glass Installation Robot

WSR-600M is an Easytech multifunction glass installation robot. Maximum rated load: 600 kg; Maximum lifting height in vacuum pad / fork mode: 3800 mm; Travel motor power: 4.5 kW; Battery: DC12 V / 140 Ah × 2; Arm extension stroke: 950 mm. The winch attachment has 70 m of steel wire rope. This is a rope-length specification, not a 70 m lifting height. The 3,800 mm maximum lifting height applies to vacuum-pad and fork modes; winch operation follows its own attachment envelope.

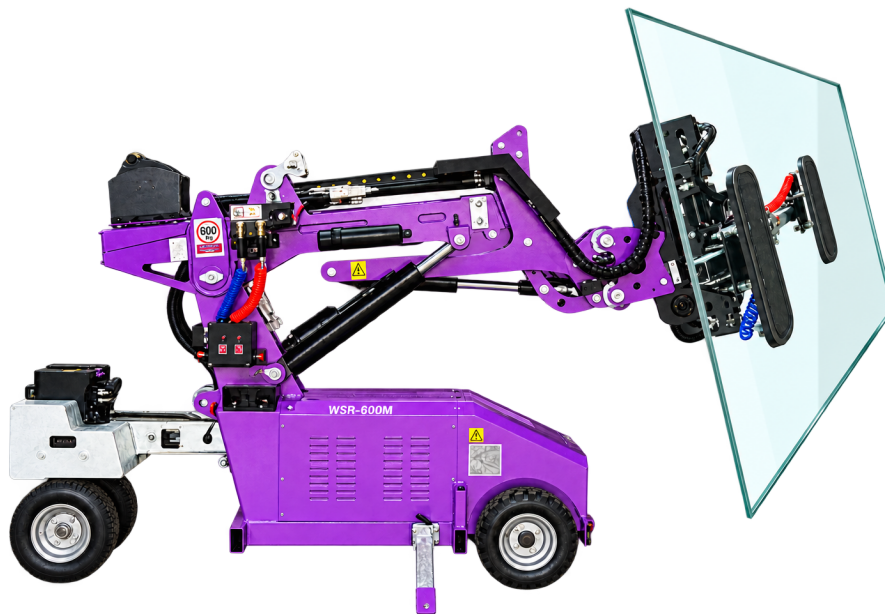

Series reference image.

Drive: Battery / electrohydraulic

Mounting: Self-propelled

Materials: Glass, Pallets

Configuration, complete technical data and selection guidance


Read the specified load and movement with their conditions. This document supports purchasing and project definition; the supplied equipment instructions govern operation and maintenance.

Jenny Zhan | Phone / WhatsApp: +86 135-3727-1735

Technical specifications


Parameter	Specification
Maximum rated load	600 kg
Maximum lifting height in vacuum pad / fork mode	3800 mm
Travel motor power	4.5 kW
Travel drive	AC24 V front-wheel drive
Battery	DC12 V / 140 Ah × 2
Charging input	AC110-220 V
Arm extension stroke	950 mm
Gradeability	15%
Vacuum system	Twin pumps and dual circuits in vacuum pad mode
Tilting	0-135°
Rotation	360° continuous
Side shift	±50 mm
Side turning	90° to each side
Interchangeable attachments	Vacuum pads / forks / winch; all three mode tables specify 600 kg rated load
Dimensions shown on drawing	Length 2050.614 mm, width 850 mm, height 1799 mm; dimensional state subject to the drawing
Load limitations	Varies with outreach and posture; refer to the load chart
Attachment interface	Quick-change attachment arrangement
Attachment options	Vacuum head, forks or winch; each attachment has its own operating scope
Counterweight arrangement	Extended counterweight design
Powered positioning functions	Lifting, extension, rotation, tilting, side shift and side turning
Winch wire rope length	70 m
Winch mode scope	70 m refers to the wire rope length, not the maximum hook height. Use the attachment-specific working envelope for the actual lifting position.

Technical drawing / working envelope

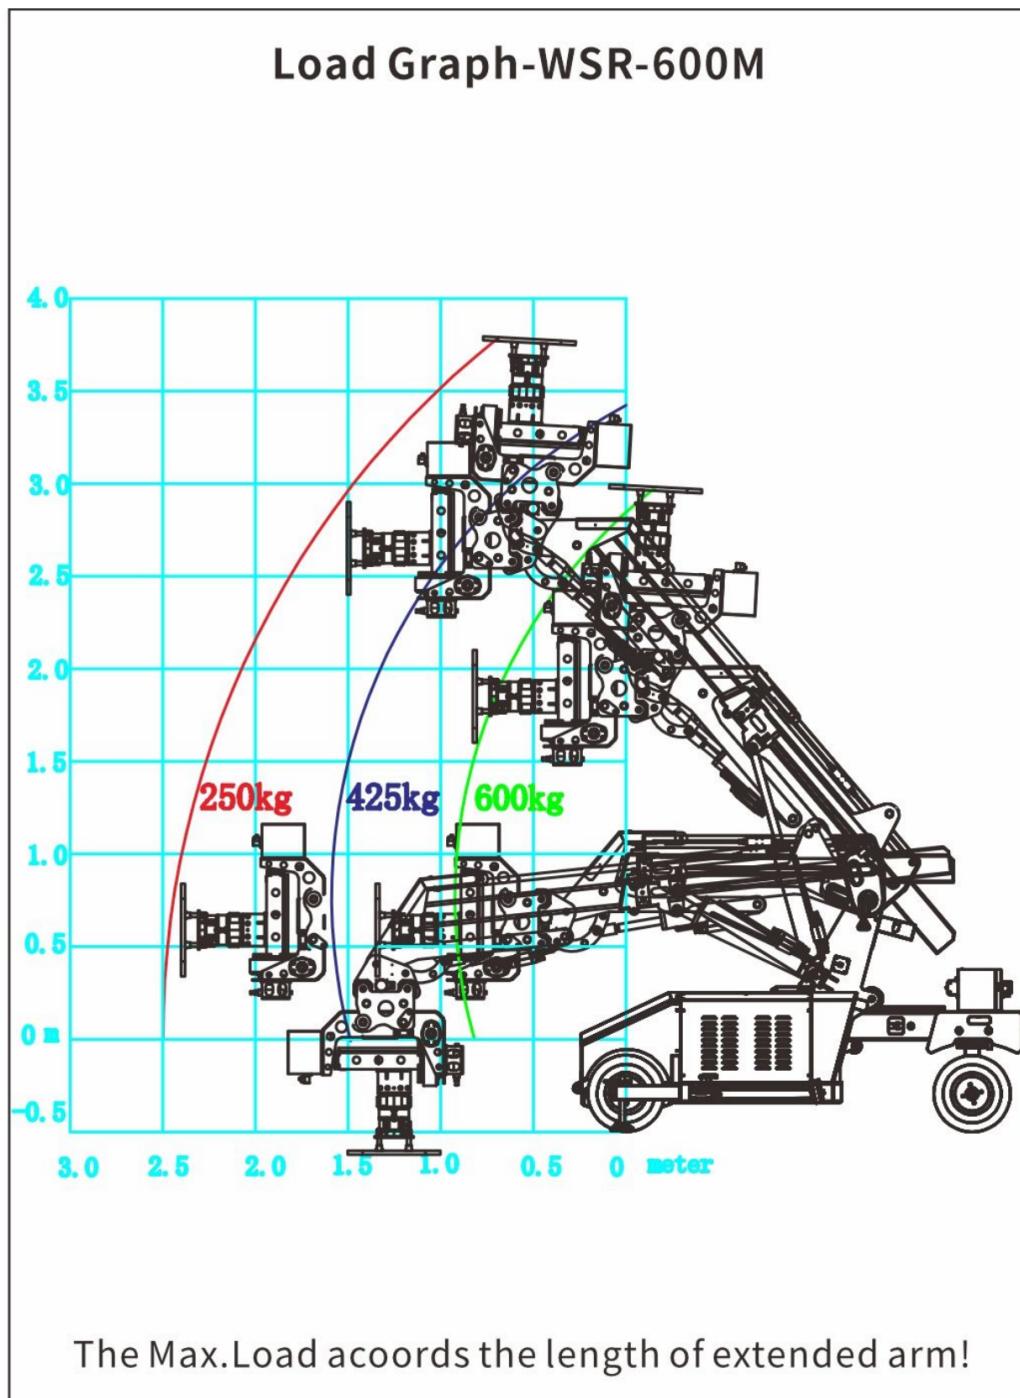

WSR-600M load envelope. Axes are in metres; curve labels are allowable loads in kg for the illustrated configuration. Maximum height and maximum load are not simultaneous ratings.

Technical drawing / working envelope

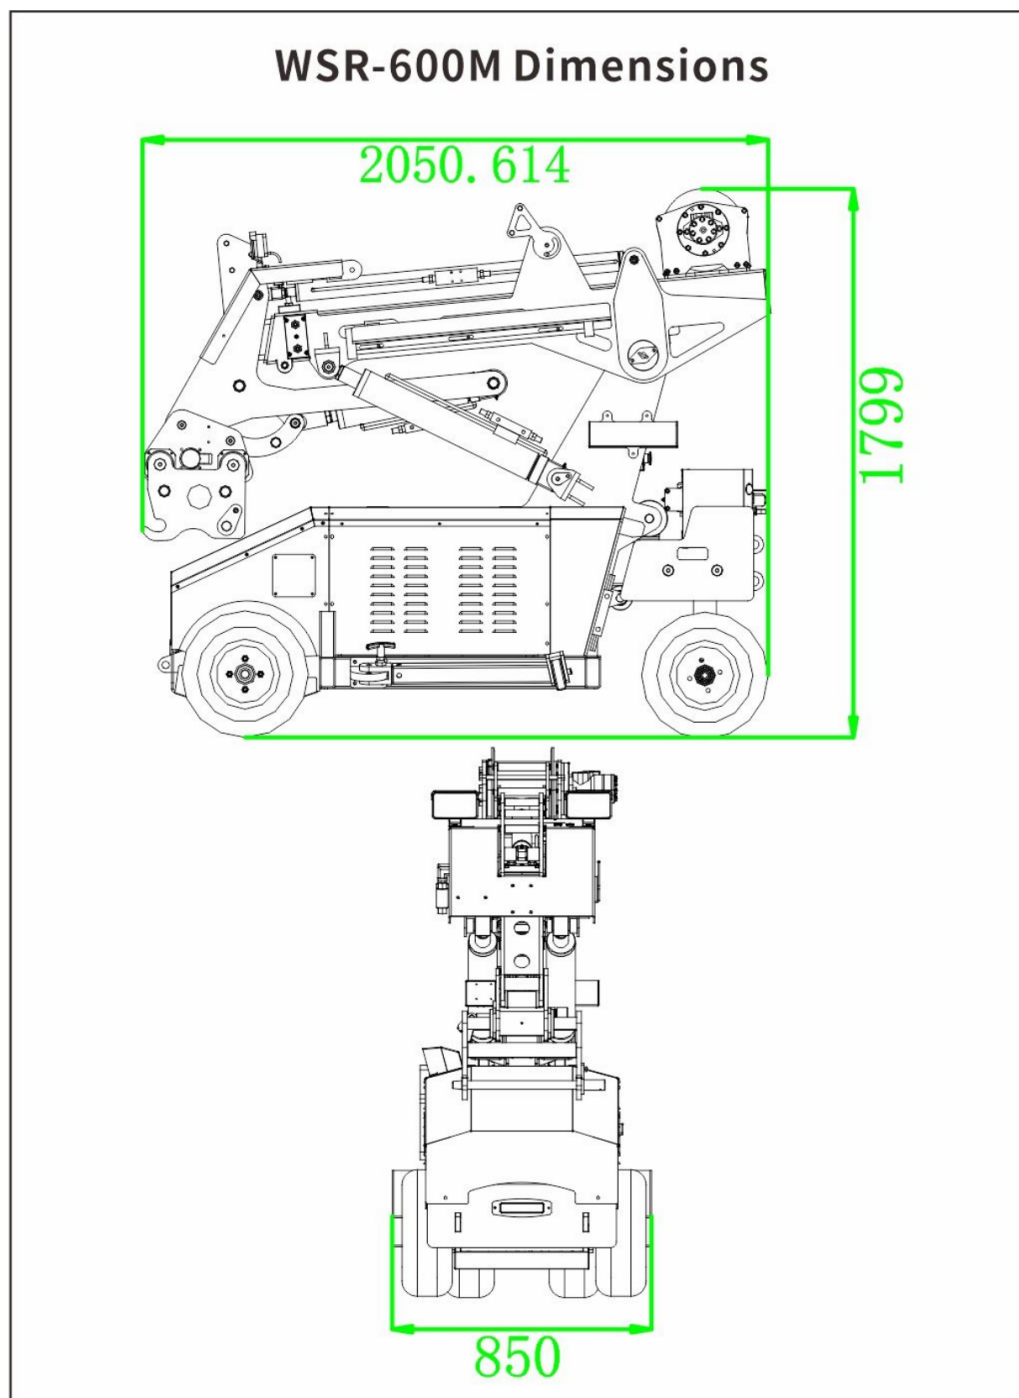

WSR-600M dimensional arrangement, mm. Dimensions refer to the illustrated folded or working posture, not necessarily the minimum transport envelope.

Access route and configuration-specific working position

The winch attachment has 70 m of steel wire rope. This is a rope-length specification, not a 70 m lifting height. The 3,800 mm maximum lifting height applies to vacuum-pad and fork modes; winch operation follows its own attachment envelope.

Compare the published configuration

Selection point	WSR-600M - Multifunction Glass Installation Robot	TAT 1500 - Tracked Glass Installation Robot	TAT 1000 - Tracked Glass Installation Robot
Maximum rated load	600 kg	1500 kg	1000 kg
Maximum lifting height	-	8660 mm	6150 mm
Minimum overall dimensions	-	4475 × 1480 × 2336 mm	2672 × 1377 × 2061 mm
Equipment weight	-	7110 kg	3000 kg
Pad configuration	-	Ø400 mm × 8	500 × 850 mm × 2
Winch wire rope length	70 m	-	-
Winch mode scope	70 m refers to the wire rope length, not the maximum hook height. Use the attachment-specific working envelope for the actual lifting position.	-	-

Equipment and intended application

The mobile chassis carries the lifting arm and vacuum head. Travel positions the machine; arm movement provides reach and height; the head aligns the glass using the listed tilt, rotation and fine-positioning functions. Each movement has its own limit, and the load envelope changes with reach and posture.

Workpiece suitability and limits

Topic	Details
Access to the work area	Compare the transport envelope with doors, lifts, corridors and turning spaces. Check machine mass plus the transported load against the floor and access route; width alone does not establish access.
Placement geometry	Specify glass weight and size, final installation height, horizontal setback and any overhead obstruction. Maximum height and maximum load are separate values and must not be combined as a single operating point.
Ground and weather	Check surface strength, slope, obstacles and the support arrangement. Gradeability is a travel specification, not permission to lift on that slope. Outdoor work also requires suitable glass, weather and site conditions.

Configuration and supply boundaries

Topic	Details
Chassis and battery	The model table defines the travel drive, battery and minimum dimensions where stated. Listed operating time is duty-dependent and is not a guarantee for every lift cycle.
Vacuum head	Pad arrangement and vacuum circuits apply to the stated head. A fork or winch option uses a different load path and requires its own attachment instructions.
Positioning controls	Side shift translates the head; side turning swivels it; rotation turns the pane in its plane. These functions must not be conflated when checking access around an opening.
Counterweights and supports	Use the specified counterweight and support arrangement. Removing weights to reduce transport mass changes the working configuration; it does not preserve the same lifting envelope.

Installation and commissioning

- Survey access and placement before delivery: door and lift dimensions, floor loading, turns, unloading space and the installation setback.
- Prepare a suitable charging point using the supplied charger input. Check battery condition and the planned duty cycle before a shift.
- Inspect the fitted pads, vacuum hoses, hydraulic lines, tyres or tracks, counterweights, support devices and emergency stop. Check both circuits when a dual system is fitted.
- Commission controls and travel without a load, then carry out the prescribed checks for the selected glass and working posture. The operator needs the machine-specific operating instructions and load envelope.

Handling sequence

1. Prepare the work area and set the machine to its approved lifting configuration. Keep the pickup and destination accessible for a safe set-down.

2. Position the head on intact glass contact areas, apply vacuum and check the circuit indications before taking the glass weight.
3. Use the load diagram for the selected reach and height. Make controlled travel and positioning movements; use fine adjustment to align the glass without forcing it against the opening.
4. Transfer the pane onto its supports and secure it by the installation procedure before releasing the vacuum. Return the machine to its transport posture before relocating it.

Inspection, maintenance and replacement parts

Topic	Details
Before use	Inspect pads, hoses, vacuum indications, controls, tyres/tracks and the support arrangement. Investigate any alarm or change in movement.
Hydraulic system	Check for leaks and damaged hoses without touching pressurised leaks. Support moving parts and isolate energy before maintenance.
Battery and charging	Keep terminals and charging leads in serviceable condition and follow the fitted battery/charger instructions. Report declining runtime instead of assuming the catalog duration still applies.
Service identification	Record the model and serial number, attachment type, battery specification and affected component. Pad, hydraulic-seal and controller replacements must match the actual installed version.

Troubleshooting priorities

Topic	Details
Arm movement is inhibited	Check overload indication, emergency stop, power and the permitted posture. Do not bypass an interlock to reach the target position.
One vacuum circuit warns	Set the pane down using the prescribed safe procedure and find the cause. A second circuit does not authorise normal operation with a known fault.
Travel or positioning becomes irregular	Stop in a supported state and inspect the route, charge level, controls and hydraulic system. Resume only after the cause is resolved.

Frequently asked questions

Does 70 m describe the winch lifting height?

The winch attachment has 70 m of steel wire rope. This is a rope-length specification, not a 70 m lifting height. The 3,800 mm maximum lifting height applies to vacuum-pad and fork modes; winch operation follows its own attachment envelope.

What load should I use when selecting WSR-600M?

WSR-600M lists a maximum rated load of 600 kg. The permissible load at the required height and outreach comes from the matching configuration load chart. Maximum height is not the full-load height.

Can it lift its maximum rated load to maximum height?

Only if the model load chart explicitly permits that combination. Select the curve for the actual load and check the complete reach/height path, not just the final point.

What is the difference between side shift and rotation?

Side shift moves the pane laterally without changing its angle; rotation turns it within its plane. Side turning changes the head direction relative to the arm.

Can a narrow machine automatically use a passenger lift?

No. Check the whole transport envelope, turning space, total transported mass and lift loading restrictions. The narrowest chassis width is only one of those checks.

Information for application assessment

- Identify the workpiece material, dimensions, mass, contact surface and centre of gravity. Include the least favourable item in a mixed production range.
- Describe pickup and placement positions, required orientation changes, handling frequency and the site layout.
- Identify the available power or air supply and any host machine, crane, support structure or interface that must be retained.
- State the destination market and required documentation, accessories and packing constraints so the proposed configuration can be assessed as a complete system.

Document scope

This product specification supports equipment selection and project definition. It includes the model data and application guidance presented on the product page. The operating instructions supplied for the actual machine govern commissioning, testing, maintenance procedures and safe use; this specification does not replace them.

[View this model on the Easytech website](#)

Contact Easytech

Dongguan Easytech Automation Mechanical and Electrical Equipment Co., Ltd.

Room 403, No. 212, Zhongxing Road, Dalingshan, Dalingshan Town, Dongguan City

Jenny Zhan | Phone / WhatsApp: +86 135-3727-1735

Email: jennyzhan@auto-easy.com | WeChat: easytech1

<https://www.auto-easy.com/>